Starmobile

ENGAGE™ 7

User Manual

Introduction

Thank you for purchasing the Starmobile Engage 7. We trust that it will meet your satisfaction.

Please read the instructions in this manual prior to operating. Starmobile does not assume any liability from improper operation or accidental damage of the unit.

If the actual setup and usage of your unit differ from what is detailed in this user manual, please visit the Starmobile website at www.starmobile.com.ph for the latest product information or email us at info@starmobile.com.ph.

TABLE OF CONTENTS

I. Important Reminders 1
II. Product Specifications 2
III. Tablet Overview 4
IV. Quick Guide 6
V. Operating Instructions 7
  1. Getting Started 7
  2. Settings 9
  3. Setup and usage 15
  4. Managing your applications 21
  5. Connecting to the Internet 23
VI. Apps and Functions 24
  1. Music 24
  2. MX Player Pro 25
  3. Super HD Player/Gallery 26
  4. Camera 26
  5. Streaming TV 28
  6. Calendar 29
  7. ES File Explorer 29
  8. ES Task Manager 30
  9. Gmail Account 30
  10. Email 32
  11. Play Store 33
  12. Downloads 34
  13. Maps 34
  14. System Update 35
  15. System Backup 35
VII. Connecting to Networks and Devices 37
VIII. Troubleshooting 37

About Android

Enjoy a smarter mobile experience with the Android Operating System. Featuring all Google apps plus more than 600,000 apps such as songs, books movies and games ready for download on the Play Store, the Android mobile platform extends your mobile device's functionality—keeping you connected, entertained and informed.

Source: Android Website (www.android.com)

About Android 4.0 Ice Cream Sandwich

Your Starmobile Engage 7 comes pre-installed with Android 4.0 "Ice Cream Sandwich" operating system. This version includes updates to Android applications that have been released via the Play Store downloadable applications service.

I. Important Reminders

1. Handle your Engage 7 with care. Dropping or vigorously shaking the Starmobile Engage 7 may damage the display.
2. Your Engage 7 is optimized for touchscreen operation. Do not use any metal object as a makeshift stylus to prevent short-circuiting.
3. Take precaution against data loss by backing up your data, particularly before upgrading your Engage 7 firmware. Starmobile is not responsible for any malfunction or damage due to unauthorized software upgrade or rooting of the device.
4. Direct hardware concerns/issues to Starmobile-accredited service centers. Do not attempt to disassemble the device on your own.
5. Clean your Engage 7 using dry non-abrasive cloth. Do not use alcoho thinner or benzene to clean the surface of the Engage 7.
6. Do not disconnect your Engage 7 while in the middle of formatting or uploading/downloading as this may lead to errors in operation.
7. Operate your Engage 7 as detailed in this manual to ensure proper usage. Starmobile is not responsible for flash damage caused by product malfunction or repair.
8. Keep your Engage 7 away from liquids or foreign objects that may enter the unit and cause permanent damage.
9. Do not leave the device inside the car or use in extremely hot, cold, dusty, or humid conditions. This will affect performance and will likely damage the unit.
10. Device specifications are subject to change and improvement without prior notice.

II. Product Specifications

Color	Mocha Brushed Metal Finish
Size & Weight	Dimension: 210mm x 127mm x 11mm Weight: 460g (inclusive of battery)
Memory	Internal Memory: 4GB ROM + 512MB RAM Expansion: MicroSD up to 32GB
Wireless	Wi-Fi 802.11 b/g/n
Display	7-inch Capacitive Multi-Touch display WVGA 800x480 pixel resolution at 133 pixels per inch (ppi), 16.7M colors
Processor	Allwinner A13 ARM Cortex A8 1GHz
Operating System	Android 4.0 “Ice Cream Sandwich”
Imaging	Rear Camera: 3.0 Megapixels Front Camera: VGA Fixed Focus Supports video calls via Skype or Messenger over Wi-Fi and 3G via dongle
External Buttons and Connectors	Power On/Off/Lock Reset button Microphone Built-in speakers 3.5-mm earphone jack Mini USB

Power and Battery	4000 mAh lithium-ion Battery Charging via power adapter or USB to computer system
Input/Output	Micro SD card slot 3.5mm stereo earphones
Sensors	Two-axis gravity sensor
Location	Wi-Fi A-GPS
Audio Formats Supported	MP1, MP2, MP3, WMA, WAV, OGG, OGA, APE, FLAC, AAC, M4A, 3GPP
Video Formats Supported	AVI, MPG, MKV, RM, RMVB, MP4, MOV, VOB, DAT, FLV, TS, 3GP, WEBM (VP8) Video Decoder capability: up to HD 2160p High frame rate encoding:1080p@60fps and 720p@100fps Video Encoder capability: up to H.264 High Profile format
Mail Attachment Support	.jpg and .gif (images); .doc and .docx (Microsoft Word); .xls and .xlsx (Microsoft Excel); .ppt and .pptx (Microsoft PowerPoint); .pdf (Preview and Adobe Acrobat)
In the Box	Engage 7 USB cable Charger Earphones User Manual

Note: *Photos provided in this manual are provided for reference only. The actual design and specifications of your Engage 7 are subject to change without prior notice.*

III. Tablet Overview

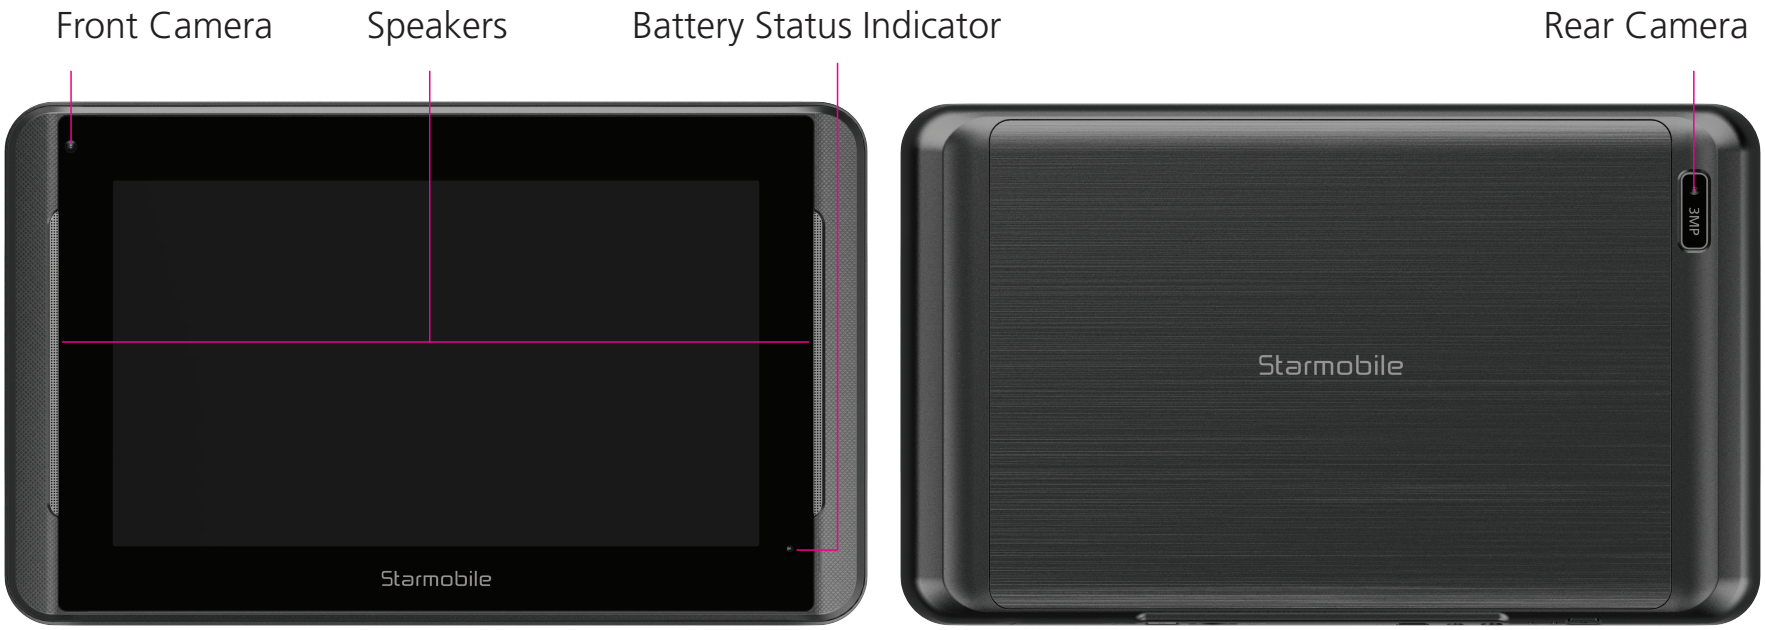
Front Camera
Speakers
Battery Status Indicator
Rear Camera
Starmobile
Starmobile
3MP

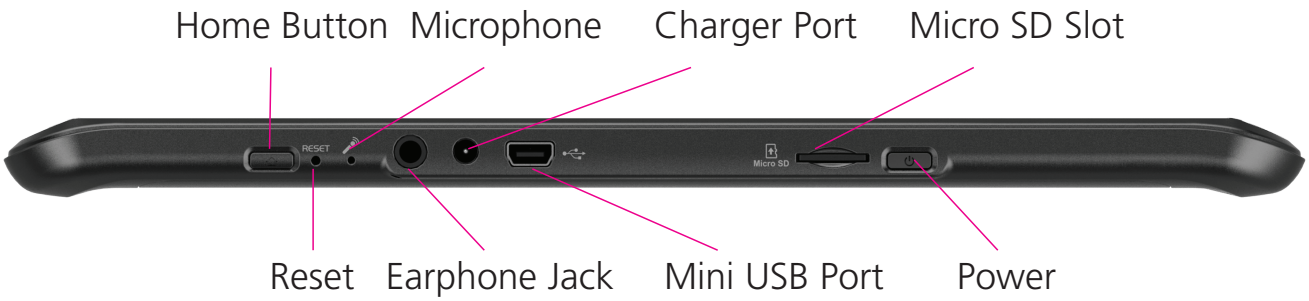
Home Button
Microphone
Charger Port
Micro SD Slot
RESET
Micro SD
Reset
Earphone Jack
Mini USB Port
Power

Power Key	Press and hold to switch on/off the device. If device is in use, press once to turn off screen backlight. If device is on sleep mode, press once to activate screen display.
Home Button	Press to exit current screen and return to home screen.

Rear Camera Lens	3MP rear camera for image and video capture.
Front Camera Lens	VGA front-facing camera for image and video capture.
Microphone	Used for picking up voice or audio during recording.
Speakers	Used for playback of audio and video, notification alerts, and tones.
Charger Port	Allows you to connect the charger.
Micro SD Slot	Allows you to install the memory card for additional storage.
Reset Button	Press and hold for 2-3 seconds to reset device.
Battery Status Indicator	Indicates state of battery: Red light - charging is ongoing, Lights off – battery is fully charged.
Mini USB Port	Connect a Mini USB cable for data exchange.
Earphone Jack	Allows you to plug in a 3.5mm audio device

IV. Quick Guide

1. You will first need to sign up for a Gmail account to fully utilize Google services in your Engage 7, and download applications via the Play Store. If you already have a Gmail account, you will only need to sign in to access the related Google features.
2. The Starmobile Engage 7 comes with a special screen backlight control function that maximizes battery life. The screen backlight automatically powers off when the device is idle or on standby mode for a certain period of time. You can re-activate the screen by pressing the Power on/off key.
3. In the event of an unresponsive touchscreen, shut down and restart your Engage 7. You can also reset the device by pressing the reset button located beside the Home Button.

☞ **Note:** *Running many applications simultaneously on your device can slow down processing speed.*

4. It is normal for your Engage 7 to become warm during heavy use, particularly in the event of non-stop data transmission, when playing music, and activating Wi-Fi 📶. In such conditions, your Engage 7 is utilizing a significant amount of power which then generates heat. Rest your device every three hours of heavy use to keep it running optimally.
5. To maximize your device’s battery life, follow these steps: reduce screen brightness 30-50%, switch off Wi-Fi and data synchronization if not in use, and adjust device volume.

V. Operating Instructions

1 Getting Started

1.1 Inserting your Memory Card

Your Starmobile Engage 7 supports micro SD cards up to 32GB.

- Slide in the memory card onto the designated slot. Make sure that its gold chip is facing upward and that its beveled edge is properly aligned with the card slot.

1.2 Power on/Power off

Power on: Press and hold the power on/off key for three seconds, after which Engage 7 displays the start-up logo and goes to the home screen.

Power off: Press and hold the power on/off key to switch the device off.

Sleep: Deactivate your device’s screen when not in use to save on power. You can do this by tapping the power on/off key and putting your Engage 7 on sleep mode. To activate the screen from sleep mode, just press the power on/off key again.

1.3 Charging

When your Engage 7 prompts that the battery level is low, charge it immediately using the provided charger.

Note: *Avoid leaving the charger on for more than 15 minutes after your Engage 7 prompts you that the battery has been fully charged. Overcharging your battery will significantly cut down battery life and performance.*



⚠ Connect charger

The battery is getting low.
14% remaining

Battery use
OK

1.3 Charging

1.4 Main menu

Click the ▦ icon in the home screen to view the main menu. Here you can access the various applications and functions you have installed in your Engage 7.

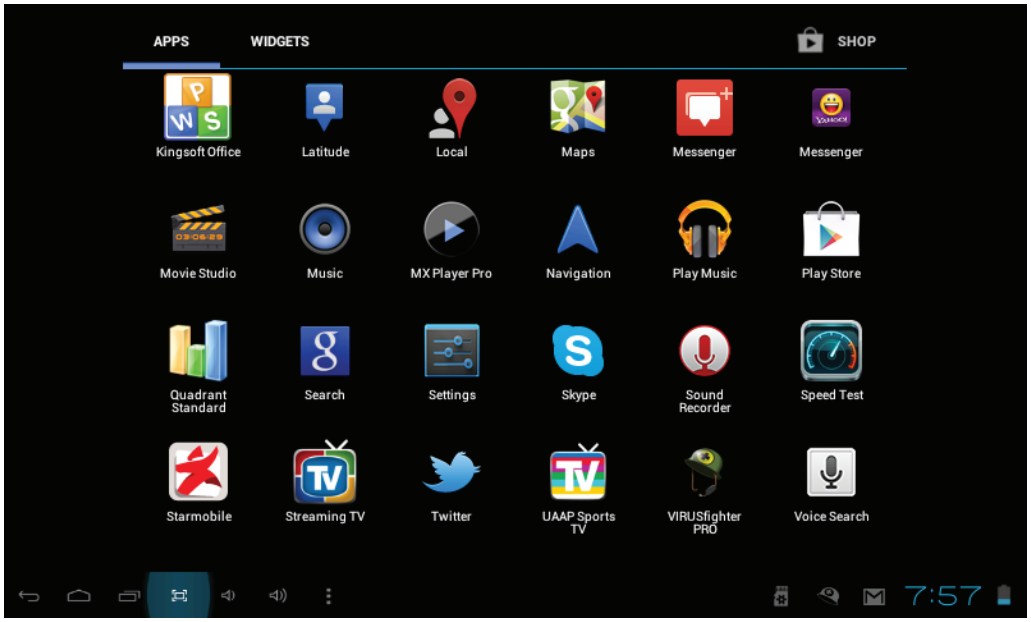

APPS
WIDGETS
SHOP
Kingsoft Office
Latitude
Local
Maps
Messenger
Messenger
Movie Studio
Music
MX Player Pro
Navigation
Play Music
Play Store
Quadrant Standard
Search
Settings
Skype
Sound Recorder
Speed Test
Starmobile
Streaming TV
Twitter
UAAP Sports TV
VIRUSfighter PRO
Voice Search
7:57

1.4 Main menu

2 Settings

Configure tablet settings according to your preferences.

2.1 Date and Time Setting

Go to Settings > Date and Time to adjust the clock, calendar, time zone, and date and time format.

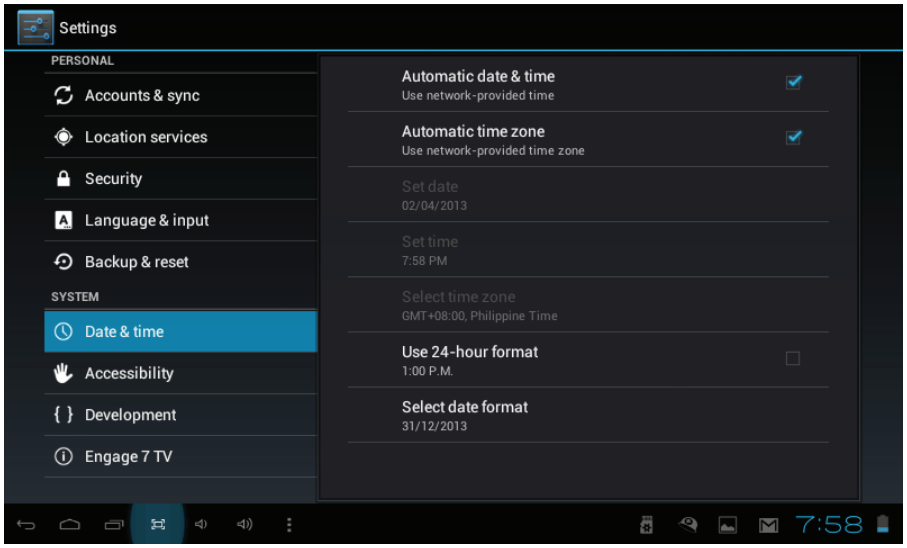
Settings
PERSONAL
Accounts & sync
Location services
Security
Language & input
Backup & reset
SYSTEM
Date & time
Accessibility
Development
Engage 7 TV
7:58

Automatic date & time ☑
Use network-provided time

Automatic time zone ☑
Use network-provided time zone

Set date
02/04/2013

Set time
7:58 PM

Select time zone
GMT+08:00, Philippine Time

Use 24-hour format ☐
1:00 P.M.

Select date format
31/12/2013

2.1 Date and Time Setting

2.2 Brightness

Go to Settings > Display > Brightness. Drag the bar to adjust to the desired screen brightness.

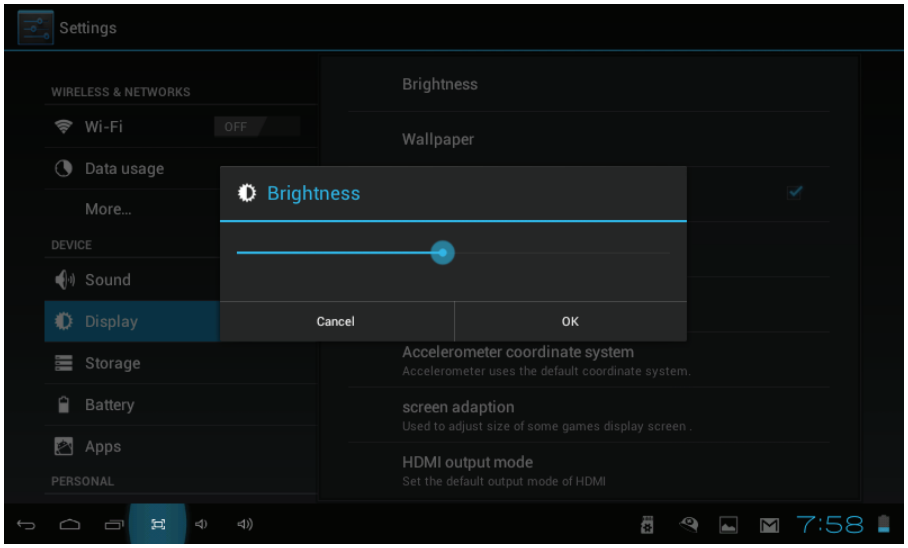
Settings
WIRELESS & NETWORKS
Wi-Fi
OFF
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Brightness
Cancel
OK
7:58

Brightness

Wallpaper

Accelerometer coordinate system
Accelerometer uses the default coordinate system.

screen adaption
Used to adjust size of some games display screen .

HDMI output mode
Set the default output mode of HDMI

2.2 Manually select brightness level

2.3 Wi-Fi

2.3.1 Go to Settings > Wi-Fi, as shown in the photo.

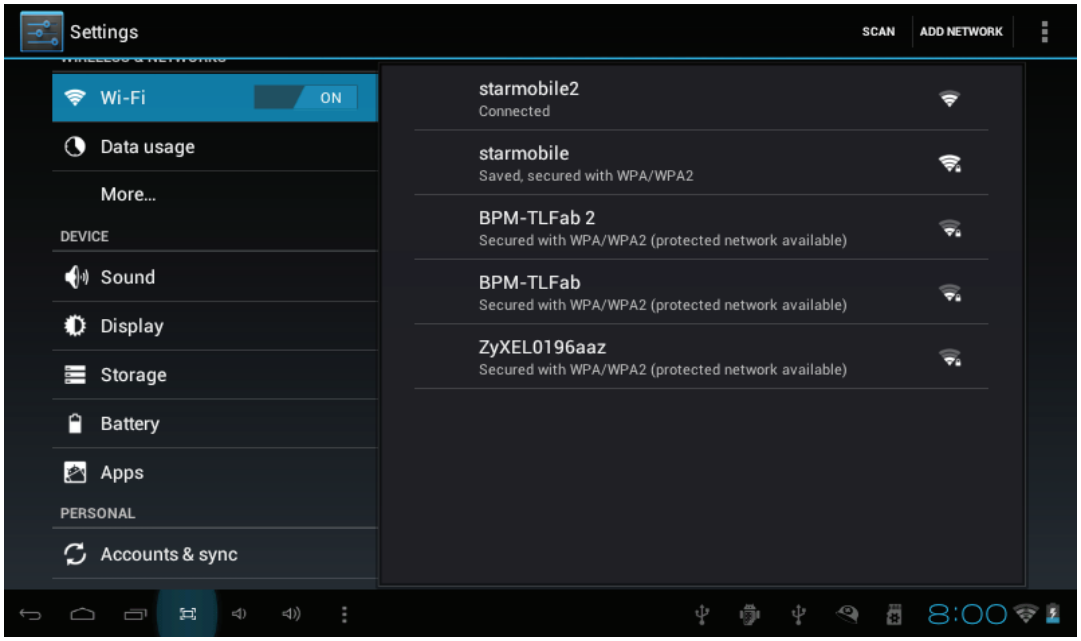
Settings
SCAN
ADD NETWORK
WIRELESS & NETWORKS
Wi-Fi
ON
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
8:00

starmobile2
Connected

starmobile
Saved, secured with WPA/WPA2

BPM-TLFab 2
Secured with WPA/WPA2 (protected network available)

BPM-TLFab
Secured with WPA/WPA2 (protected network available)

ZyXEL0196aaz
Secured with WPA/WPA2 (protected network available)

2.3.1 Wi-Fi

2.3.2 Select Wi-Fi. Swipe the slider On/Off to enable/disable Wi-Fi connectivity.


WIRELESS & NETWORKS
Wi-Fi
OFF
WIRELESS & NETWORKS
Wi-Fi
ON

2.3.3 Once you've switched on Wi-Fi, the right side of the screen will display the available networks.

2.3.4 Select your preferred network. If the network is open or free for public use, you will automatically be connected. If the network is secure, a pop-up window will then appear, prompting you to type in the network password.

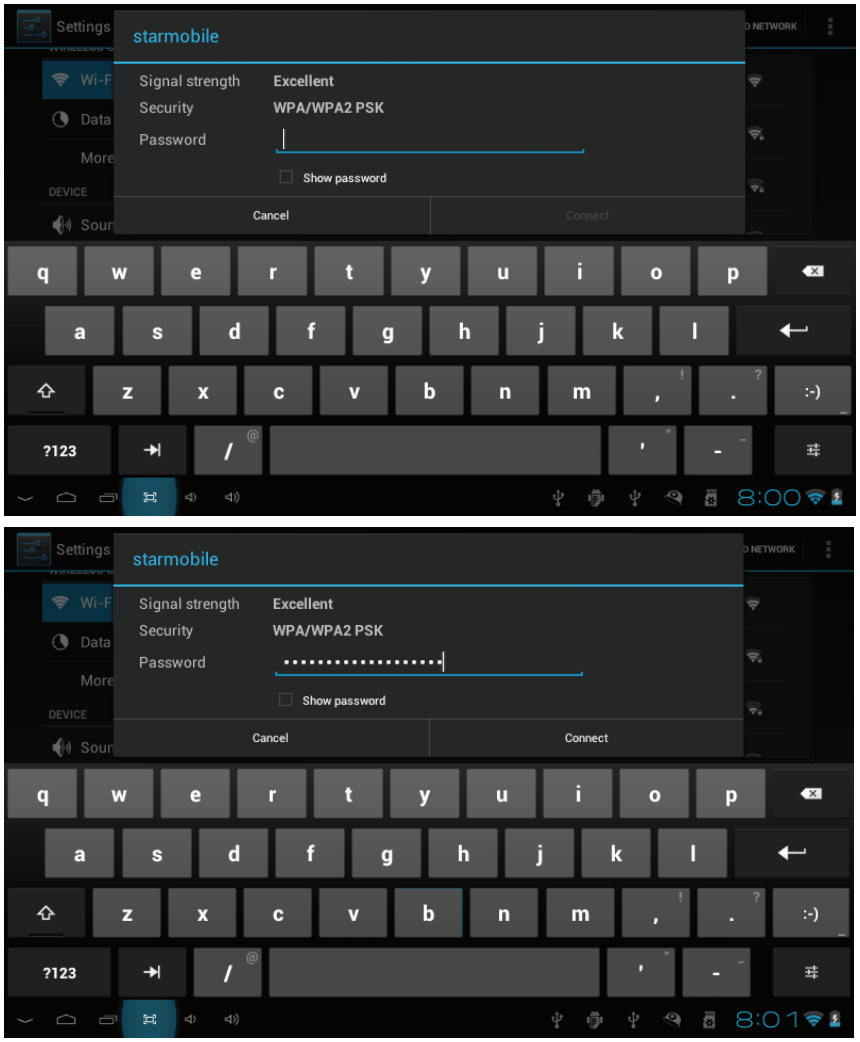

starmobile

Signal strength Excellent

Security WPA/WPA2 PSK

Password

Settings
Wi-Fi
Data
More
DEVICE
Sound
☐ Show password
Cancel
Connect
?123
:-)
8:00
8:01

2.3.4 Enter password then click Connect

2.3.5 Click "Connect" after typing in the password. Your Engage 7 will obtain the network IP address automatically.

2.3.6 If your Engage 7 does not automatically detect wireless networks to connect to, click SCAN to search for networks manually.

2.3.7 To manually add networks, click ADD NETWORK. Input the following: Network SSID, Security, Type, and Password, then click Save.

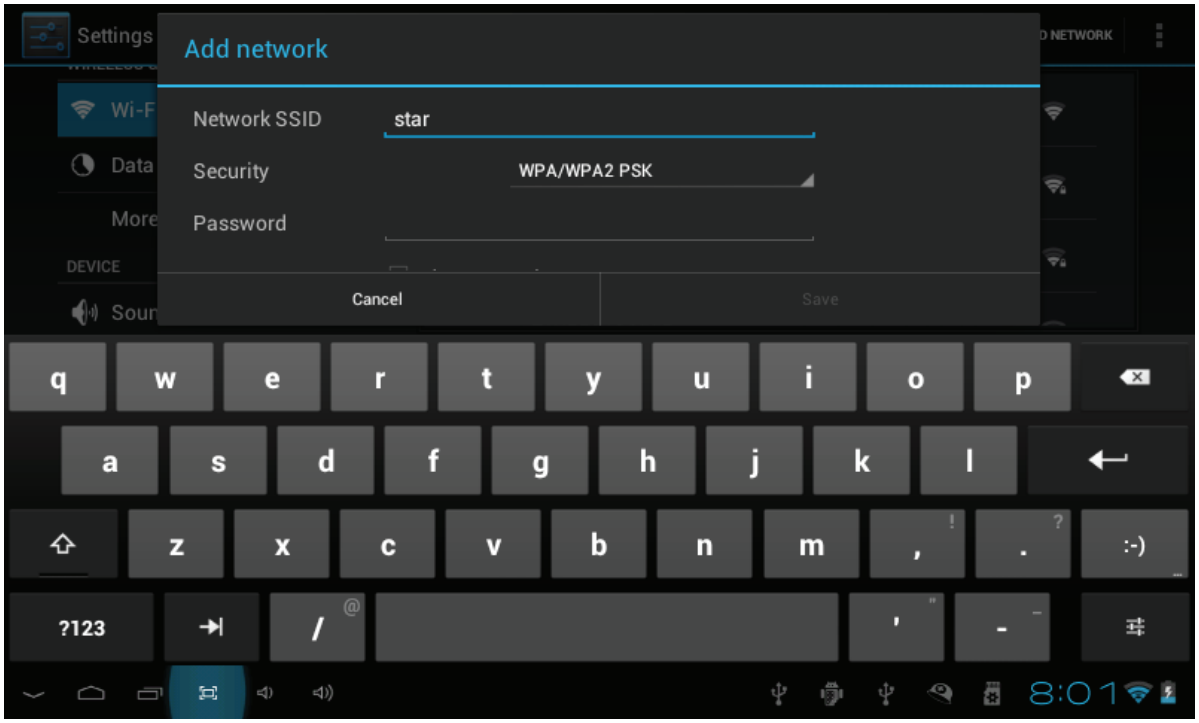

Add network

Network SSID: star

Security: WPA/WPA2 PSK

Password:

Settings
Wi-Fi
Data
More
DEVICE
Sound
ADD NETWORK
Cancel
Save
?123
:-)
8:01

2.3.7 Manually add network

2.3.8 Click ⋮ to access advanced Wi-Fi options which allow you to modify network notification and sleep mode, as well as check the tablet's MAC and IP addresses.



SCAN
ADD NETWORK
Advanced

2.4 Data Usage

Data usage refers to the amount of data uploaded or downloaded by your device during a given period using 3G dongle. Depending on your wireless plan, you may be charged additional fees when your data usage exceeds your plan's limit.

To monitor your data consumption, adjust your data usage settings. First check your plan and determine what data limits may apply.

Note: *The usage displayed on the data usage settings screen is measured by your tablet. Your carrier's data usage accounting may differ. Usage in excess of your carrier plan's data limits can result in steep coverage charges.*

Data usage settings allow you to:

- Set the data usage level at which you'll receive a warning.
- Set a data usage limit.
- View or restrict data usage by app.

2.5. Sound

Configure your sound and notification settings

To set notifications alerts, go to “Sound” then select from the list of available tones. You may also set audio files stored in your micro SD card as your preferred notification tone. Click OK to save.

To set sound volume, go to “Volume.” Drag the indicator to adjust volume level.

2.6 Storage

Storage indicates the detailed memory consumption and free memory space of your device whether system or internal storage. You can also set the default storage where you want to save your pictures, music and other files. To do so, click **Preferred install location** and choose from the following options: Internal device storage, Removable SD card, or Let the system decide.

2.7 Battery

Displays the battery percentage and battery consumption patterns of your tablet.

2.8 Data reset

2.8.1 If your Engage 7 malfunctions during use, you may select “Back up & reset” under the Settings menu to reset the data.

2.8.2 If your memory card is inaccessible or if you want to delete all files in the device, go to the Settings > Storage then click “Format SD card.”

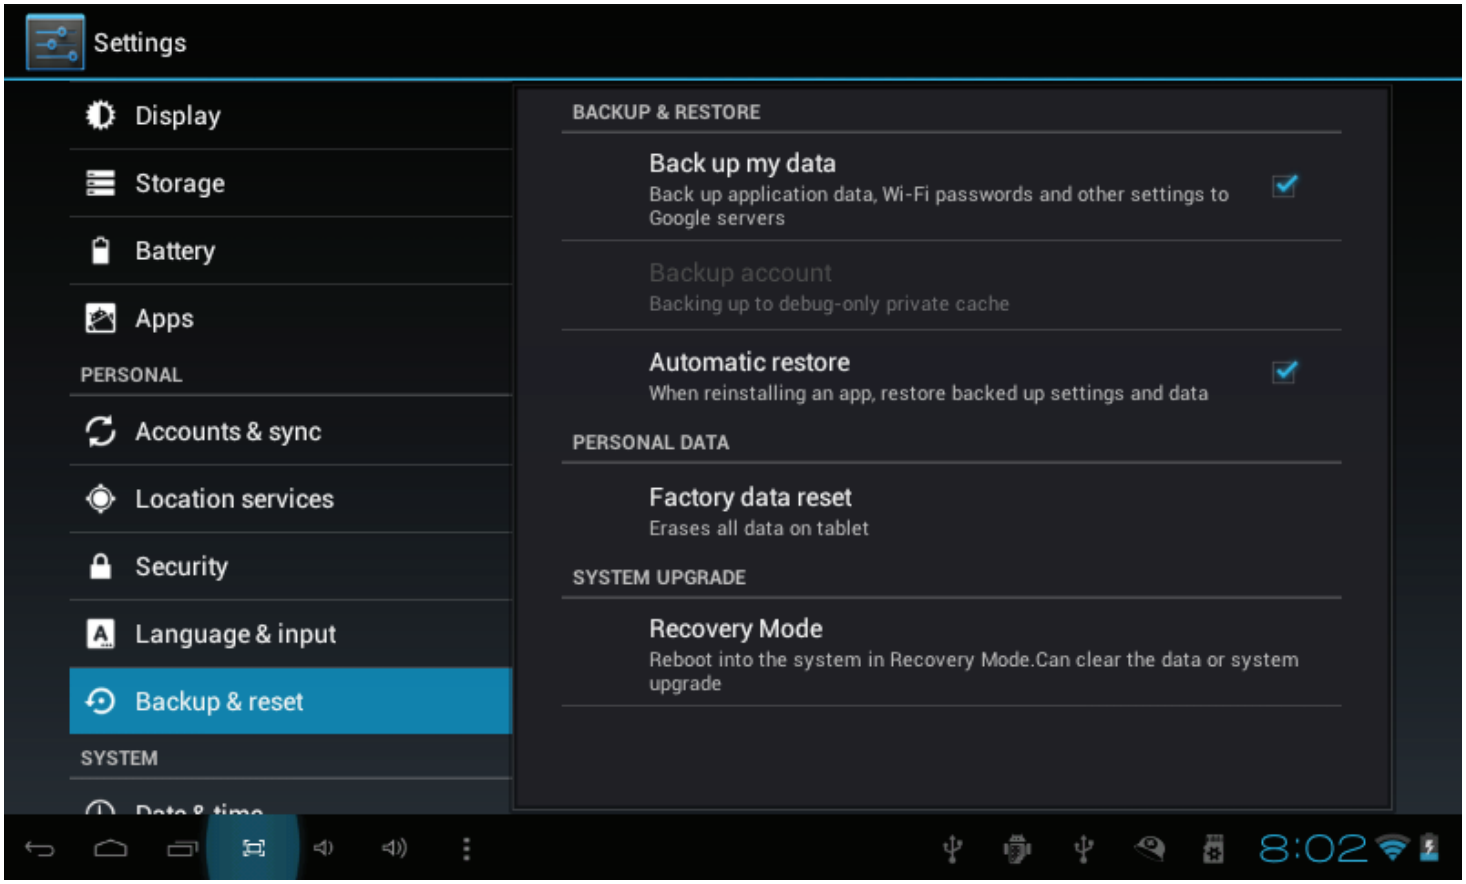
Settings
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Security
Language & input
Backup & reset
SYSTEM
Date & time
8:02

BACKUP & RESTORE

Back up my data ☑
Back up application data, Wi-Fi passwords and other settings to Google servers

Backup account
Backing up to debug-only private cache

Automatic restore ☑
When reinstalling an app, restore backed up settings and data

PERSONAL DATA

Factory data reset
Erases all data on tablet

SYSTEM UPGRADE

Recovery Mode
Reboot into the system in Recovery Mode.Can clear the data or system upgrade

2.8.1 Back up and reset

3 Setup and Usage

3.1 Setting Up Your Tablet

The first time you turn on the tablet, you'll see a Welcome screen.

- To choose a different language, go to Menu > Settings > Personal > Language & input.
- To set up your tablet, touch Start and follow the instructions.

A series of screens takes you through the setup process. If you already have a Google or Gmail account, use your Gmail address and password when asked. If you don't have Gmail or any other Google Account, you may create one at www.gmail.com or by following the onscreen instructions.

3.1.1 Why use a Google Account?

A Google Account lets you organize and access your personal information from any computer or mobile device:

- **Never lose your contacts again**. When you sign into your tablet with a Google Account, all the contacts you associate with that account in the People application are automatically backed up. As a result, they're always accessible through your Gmail account from any computer.
- **Synchronize and back up everything**. Whether you draft an email,add an event to your calendar, or take a photo, your work gets backed up continuously by Google and synchronized with any computer where you use the same Google Account.
- **Access from anywhere**. Check your latest calendar, email, text messages, or social stream, wherever you are, no matter what computer or mobile device you're using.
- **Keep your information secure and available**. Google works round the clock to protect your personal data from unauthorized access and to ensure that you get it when you need it, wherever you need it.
- **Use other Google services**. Your Google Account also lets you take full advantage of any other Google apps and services that you may want to use, such as Gmail, Google, Maps, Navigation, Android Market, YouTube, Google Talk, Messaging, and many more.

3.2 Screen Control

Once you are finished setting up your tablet, the Home screen opens.
At the bottom of the screen, you'll find four Navigation buttons that will always be available.

Icon	Name	Description
↩	Back	Opens the previous screen you were working on. Once you've reached the Home screen, you can't go back any further in your history.
⌂	Home	Opens the central Home screen. If you're viewing a left or right Home screen, this opens the central Home screen.
❐	Recent Apps	Press to view running applications
⋮	Menu	Pop-up menu options

The Favorites tray is located just above the Navigation buttons:



The app icons you keep in the tray remain visible on every Home screen.

The All Apps icon ▦ in the upper right corner of the Home screen is permanent. Touch it to see all your apps and widgets.

The middle of your Home screen can hold app and widget icons, plus folders.

- To open an app, folder, or widget, touch its icon.
- To see additional Home screens, swipe your finger quickly left or right.

Tap the magnifying glass at the upper left of the Home Screen, and you'll see something like this:



Type to search the web and your tablet, or to launch apps

3.2 Google Search on the top of the screen

Now you can search for content on your tablet or on the web.

The status icons on the lower right tell you which apps have sent you notifications; for example, that a message has arrived, or it's time for a meeting.

- To see your notifications, swipe your finger up from the lower right of the screen.

System icons on the right display the current wireless and network connection strength, battery level, time, and more.

3.3 Changing the Wallpaper

Wallpapers are images that take the place of the default background for your Home screens. To customize your wallpaper:

- Touch & hold anywhere on a Home screen that's not occupied. A list of options will appear.
- Select a wallpaper source:
  - o Gallery: displays pictures that you've taken with your Camera or downloaded to your device
  - o Live Wallpapers: displays a scrolling list of animated wallpapers
  - o Wallpapers: displays thumbnails of default images. Touch a thumbnail to see a larger version.
- For wallpapers selected from the Gallery, you will be asked to crop out the desired portion of the image before setting it as your wallpaper.

3.4 Touch & Type

Touch or tap to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touchscreen. You can also change the screen's orientation.

To select or activate something onscreen, touch it. To type something such as a name, password, or search terms, just tap where you want to type. A keyboard pops up that lets you type into the field.

Other common gestures include:

- **Touch & hold**: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs.

- **Drag**: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen.
- **Swipe or slide**: Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.
- **Double-tap**: Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a webpage in Browser to zoom in, and double-tap again to zoom out.
- **Pinch**: In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen**: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this in Display setting.

3.5 Using the Lock Screen

To protect personal information, you can adjust your tablet's lock settings:

1. From the Home or All Apps screen, touch the Settings icon ☰.
2. Scroll down and touch **Security**.
3. Touch **Screen lock**.
4. Touch the type of lock you'd like to use.

After you set a lock here, a lock screen displays whenever your screen wakes up, requesting the pattern, PIN, or other specified key.

4 Managing your Applications

4.1 Install Apps

There are several ways to install applications on your Engage 7. Options include direct download, via USB connection, or via a third-party program such as Apps Installer.

To install an application through Apps Installer, click "ES File Explorer" from the main interface.

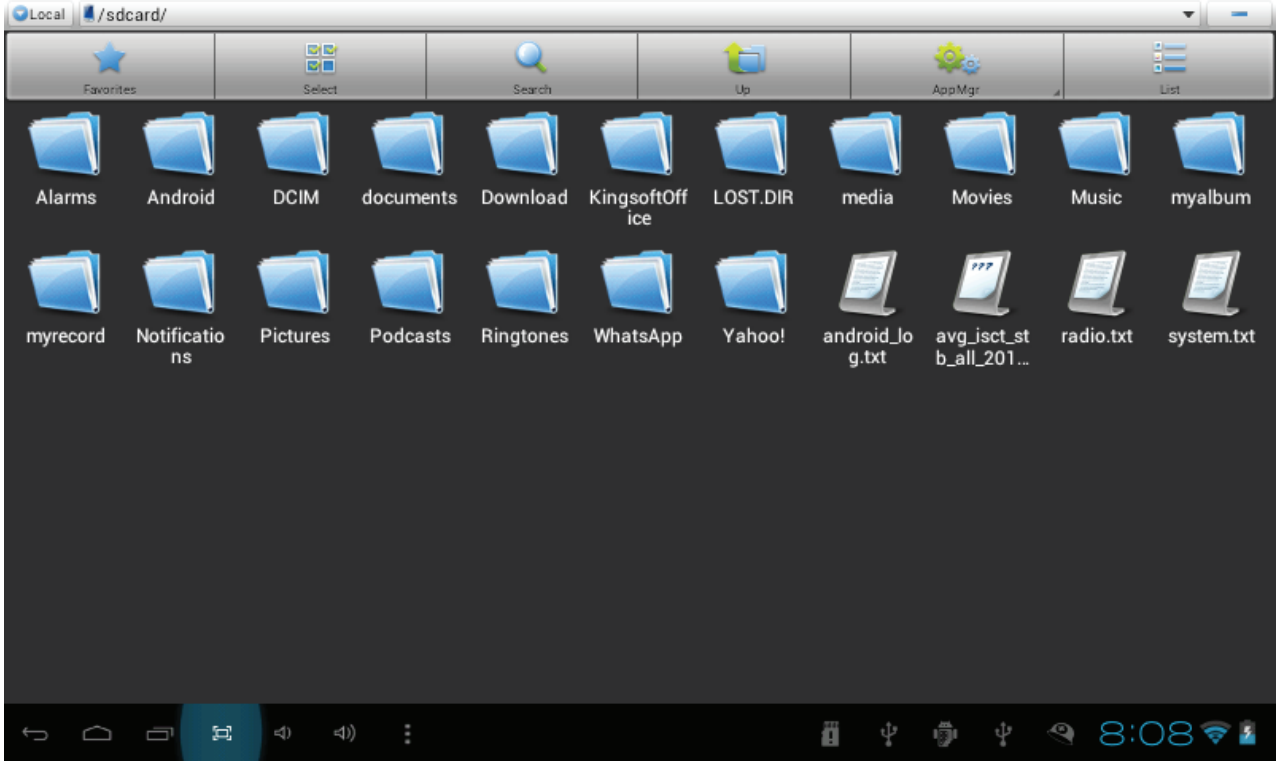
Local
/sdcard/
Favorites
Select
Search
Up
AppMgr
List
Alarms
Android
DCIM
documents
Download
KingsoftOffice
LOST.DIR
media
Movies
Music
myalbum
myrecord
Notifications
Pictures
Podcasts
Ringtones
WhatsApp
Yahoo!
android_log.txt
avg_isct_stb_all_201...
radio.txt
system.txt
8:08

4.1 ES File Explorer

Select the APK file you want then click "Install" to install the application. Once installed, you can either click "Open" to run the application or click "Finish" to exit the installation interface.

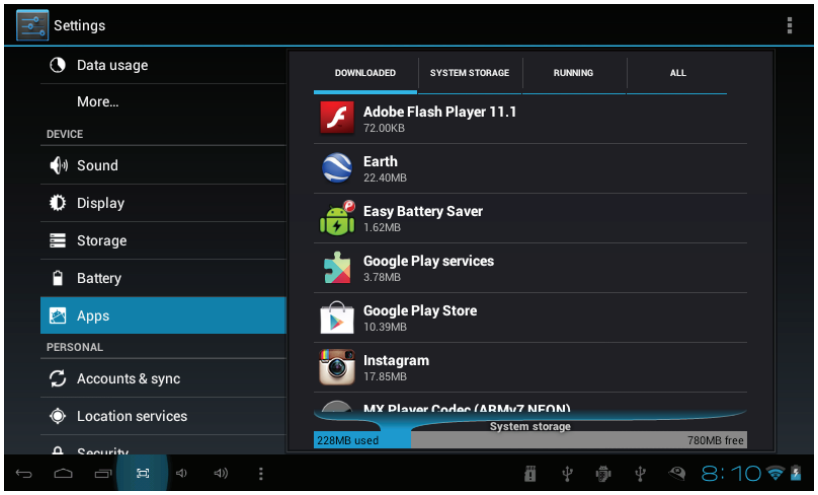
Settings
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Security
DOWNLOADED
SYSTEM STORAGE
RUNNING
ALL
System storage
8:10

Adobe Flash Player 11.1
72.00KB
Earth
22.40MB
Easy Battery Saver
1.62MB
Google Play services
3.78MB
Google Play Store
10.39MB
Instagram
17.85MB
MX Player Codec (ARMv7 NEON)
228MB used
780MB free

4.1.2 Manage Apps Interface

4.2 Uninstall Apps

You can uninstall applications by using a third-party software management tool or the pre-installed application management software that came with your Engage 7. To uninstall an application, go to Settings > Device > Apps, and select the application you would like to uninstall.

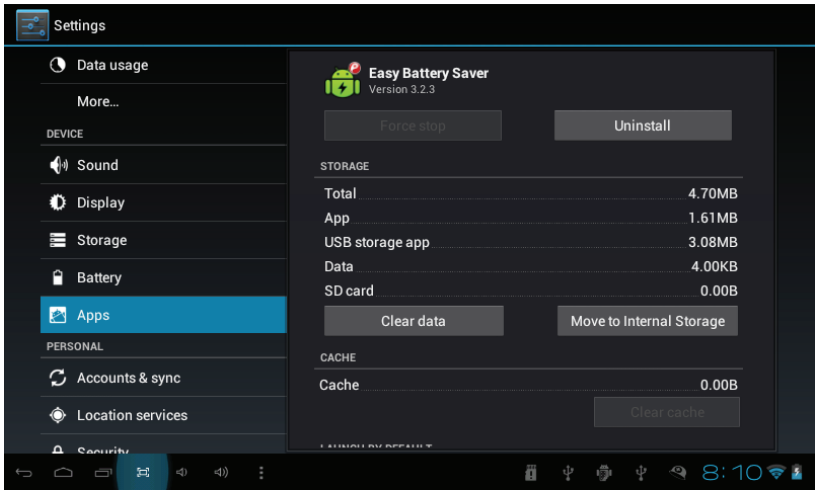
Settings
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Security
Force stop
Uninstall
Clear data
Move to Internal Storage
Clear cache
LAUNCH BY DEFAULT
8:10

Easy Battery Saver
Version 3.2.3

STORAGE

Total	4.70MB
App	1.61MB
USB storage app	3.08MB
Data	4.00KB
SD card	0.00B

CACHE

Cache	0.00B

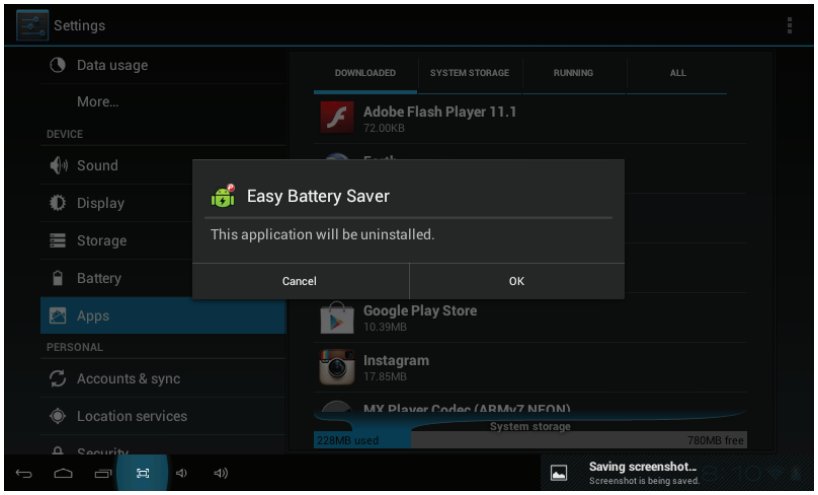
Settings
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
Accounts & sync
Location services
Security
DOWNLOADED
SYSTEM STORAGE
RUNNING
ALL
Adobe Flash Player 11.1
72.00KB
Google Play Store
10.39MB
Instagram
17.85MB
MX Player Codec (ARMv7 NEON)
System storage
228MB used
780MB free
Cancel
OK

Easy Battery Saver
This application will be uninstalled.

Saving screenshot...
Screenshot is being saved.

4.2.1 App info

4.2.2 Removing application

5 Connecting to the Internet

5.1 Once your Engage 7 is connected to a Wi-Fi network, you can open the browser and input web addresses to access the Internet.

5.2 Click ☰ then 🔖 to access your bookmarked websites and browsing history. Select the web page you would like to open from the list. To save a web page to your bookmarks, click the Menu key and select "Save to Bookmarks."

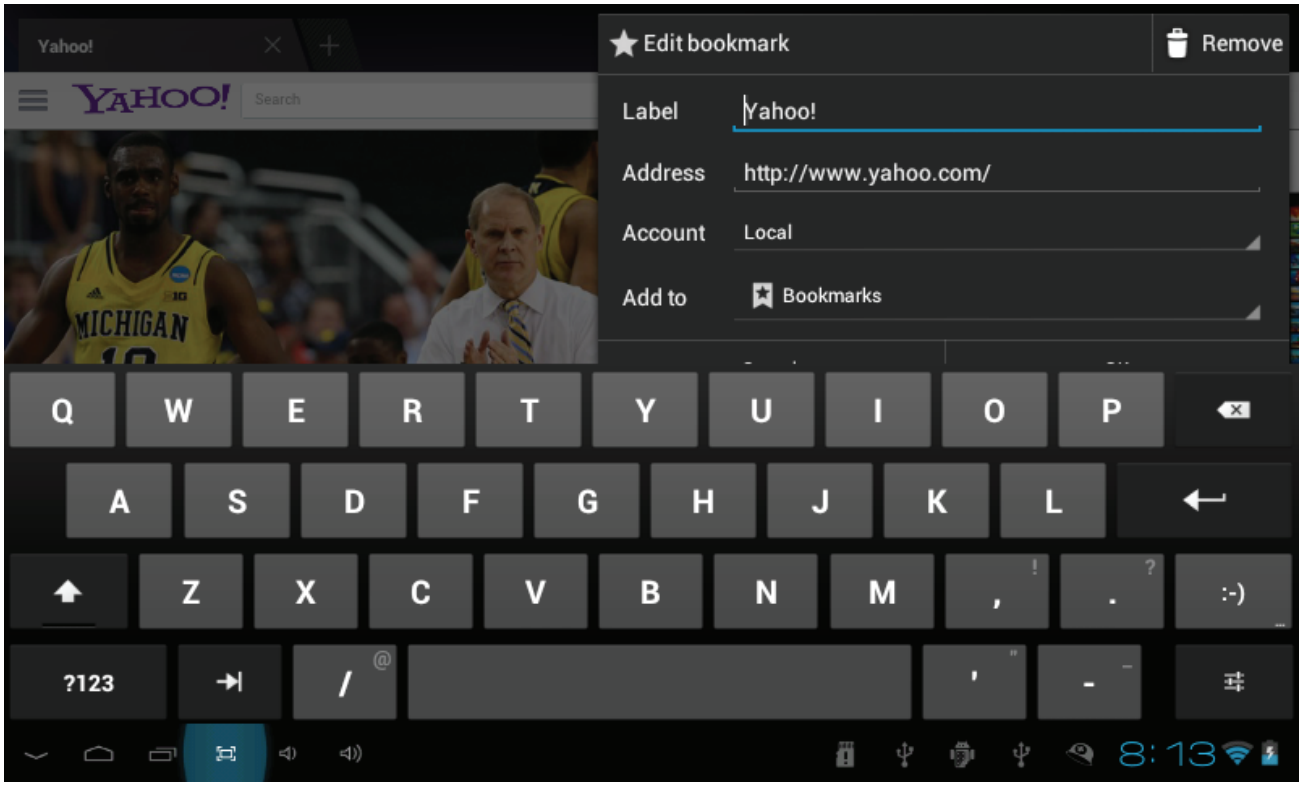

Label Yahoo!
Address http://www.yahoo.com/
Account Local
Add to Bookmarks

5.2 Saving a webpage to your bookmarks

VI. Apps and Functions

1 Music

Click "Music" in the main menu to enter the audio playback interface. You will be shown a list of available audio files which can be played on your Engage 7. Click on the title of the audio file to play it. Click the icons in the audio playback interface to play/pause/rewind/fast forward the audio file, and to increase / decrease volume.

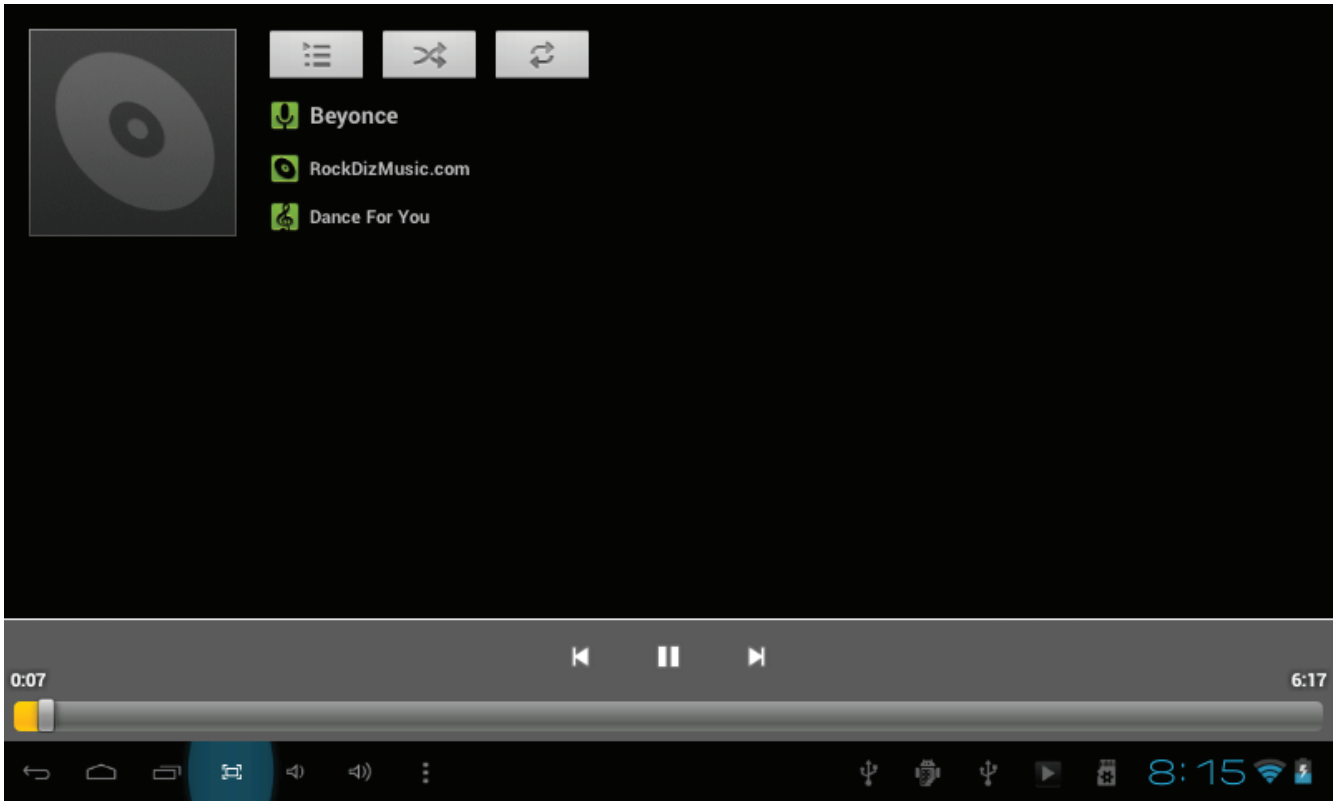
Beyonce
RockDizMusic.com
Dance For You
0:07
6:17
8:15

1.2 Playing an audio file

2 MX Player Pro

Click “MX Player Pro” in the main menu to enter the video playback interface. You will be shown a list of available video files which can be played by your Engage 7. Click on a thumbnail to play your selected video. While in video playback mode, tap on the screen to access the following options: Play/Pause video, Increase/decrease volume, and Skip to next/previous video clip.

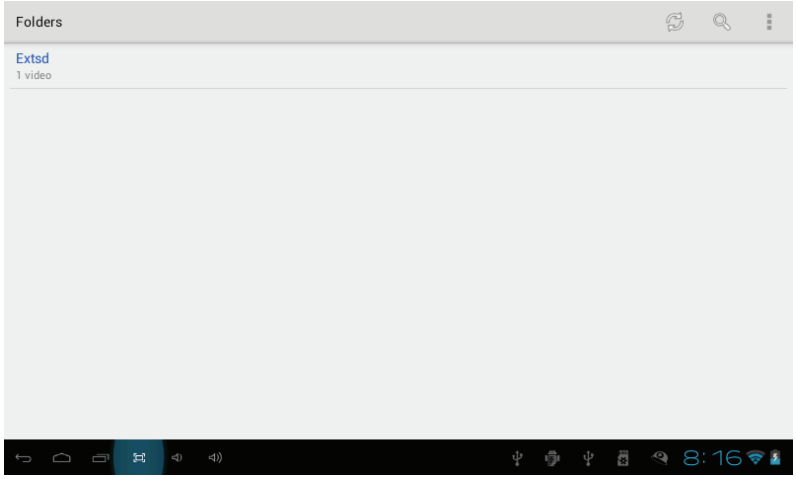
Folders
Extsd
1 video
8:16

2.1 Video playback interface

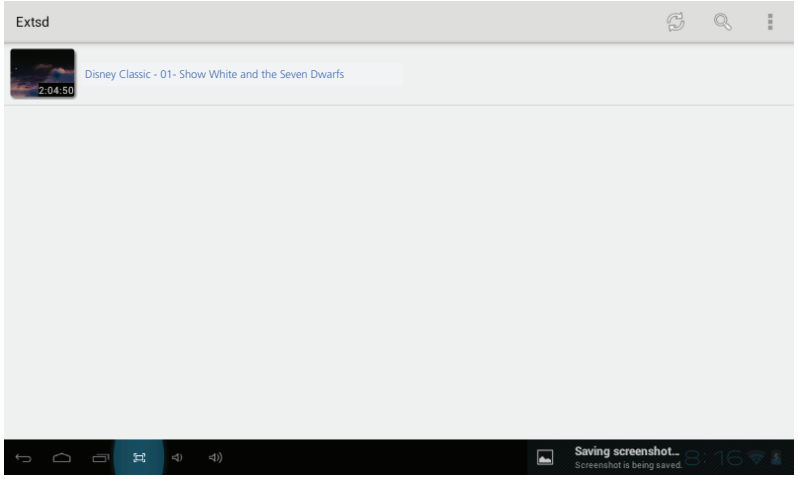
Extsd
2:04:50
Disney Classic - 01- Show White and the Seven Dwarfs
Saving screenshot...
Screenshot is being saved.

2.2 Video gallery

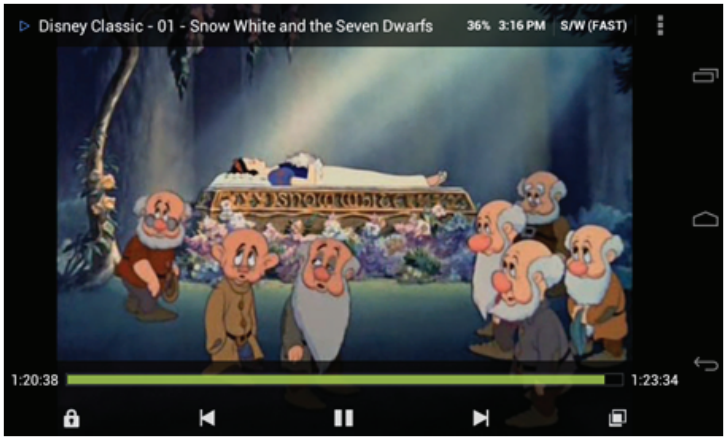
Disney Classic - 01 - Snow White and the Seven Dwarfs
36%
3:16 PM
S/W (FAST)
1:20:38
1:23:34

2.3 Options in video playback mode

3 Super HD Player/Gallery

Open “Gallery” from the main menu to view a list of available albums on your Engage 7. Click on an album and select an image thumbnail to view photo in full size.

While viewing the selected photo, tap the menu button to access the following options: Zoom in/out, Skip to next/previous picture, Rotate picture and Delete picture.



3.1 Photo gallery

4 Camera

Your Starmobile Engage 7 comes with a built-in 3 megapixel back camera with LED flash, which allows image and video capture. You can also activate the front-facing VGA camera for video calls. Press 📷 to switch between cameras on the front and back of your tablet.

4.1 Camera

If the cursor is positioned accordingly 📷 , your Engage 7 is in Camera mode.

Click ● to take a picture.
Click AW to set white balance.
Click 🔄 to select the rear or front camera.

4.2 Video

If the cursor is positioned accordingly 🎥, your Engage 7 is in Video mode.
Click ● to start filming a video.
Click ⋮ to restore to default settings.
Click 🔄 to select the rear or front camera.

4.3 Panorama

If the cursor is positioned accordingly ▭, your Engage 7 is in Panorama mode.
Click ● to start taking panoramic shots.

5 Streaming TV

Your Engage 7 comes with a Streaming TV application for playback of internet radios/videos and web broadcasts. Wi-Fi or 3G connection is required to access streaming media.

iWantv! and UAAP Sports TV streaming channels have been pre-programmed on your device.



iWantv!
www.iwantv.com.ph

5.3 Streaming TV

To add a channel, click ⋮. Enter the streaming URL and title for the channel. Click OK to save.

6 Calendar

The Calendar app lets you view and edit your schedule.

When you first set up your tablet, you may have configured it to use an existing Google Account (such as Gmail), or you created a new one. The first time you open the Calendar application on your tablet, it displays any existing calendar events from that Google Account on the web. As you edit events from any mobile device or web browser, they are synced automatically across all the places you need them.

To change the Calendar view, touch the date at the top and choose **Day, Week, Month**, or **Agenda**. Swipe to scroll vertically or horizontally. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.

From any of these views, you can:
- **Read or edit event details**. Touch an event to view its details.
- **Manage events and calendars**. Touch icons across the top or the Menu button to search or create events, return to today, or adjust settings.

7 ES File Explorer

This application lets you manage applications, games, music, photos within your SD card or your tablet storage.

8 ES Task Manager

ES Task Manager disables all the applications that may slow down the performance of your tablet. It also cleans cache that consumes memory of your device and optimizes the power of your battery by switching off applications that are not in use.

9 Gmail Account

9.1 Select one of several Gmail-related applications in your Engage 7 such as Gmail, Play Store, and Calendar. Alternatively, you can enter "Settings," select Accounts & sync and then click ADD ACCOUNT located at the top right corner of your screen. A pop-up dialog box with several account options will appear. Select Google to add a Gmail account.

9.2 You will be prompted to add a Google account. Click Get a Google Account and then input your details. Once done, click Next



Add a Google Account

Do you want to add an existing account or create a new one?

9.1 Adding a Google account

9.3 Create your Gmail address, then click Next . The system will verify if the email address is available.

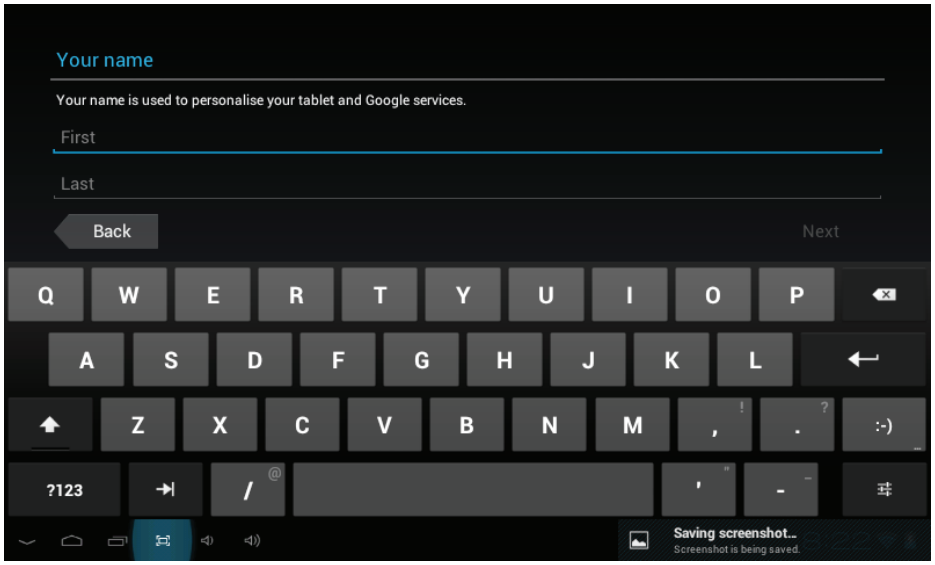

Your name

Your name is used to personalise your tablet and Google services.

First

Last

Back
Next
Q W E R T Y U I O P
A S D F G H J K L
Z X C V B N M , . :-)
?123 / ' -

Saving screenshot...

Screenshot is being saved.

9.3 Create email address

9.4 If the email address is not available, create a different user name.

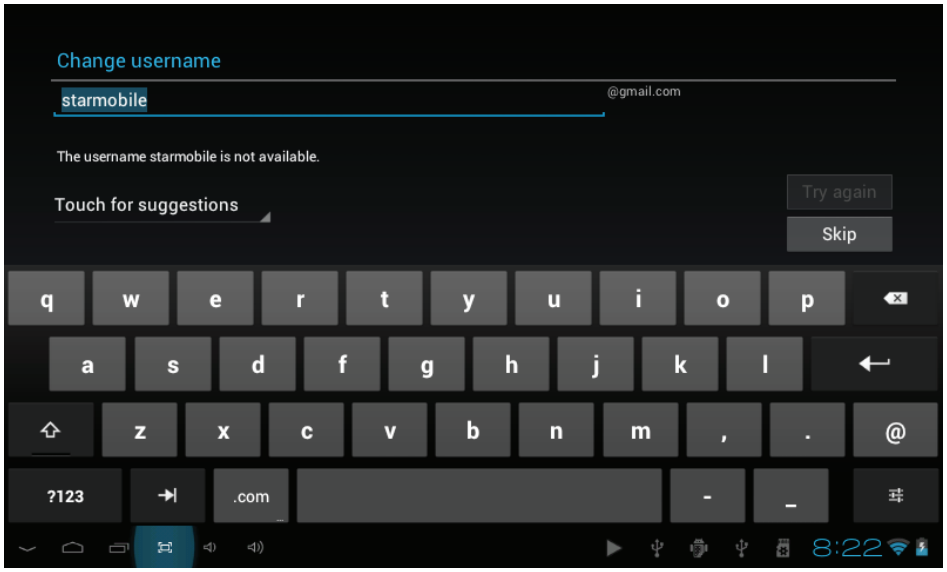

Change username

starmobile @gmail.com

The username starmobile is not available.

Touch for suggestions

Try again
Skip
q w e r t y u i o p
a s d f g h j k l
z x c v b n m , . @
?123 .com - _
8:22

9.4 Change username

9.5 If the user name is available, you will be asked to create a password.

9.6 Once you've set the password, you will be prompted for account recovery information. This will help you retrieve your account in the event that you lose your password. Click Next once done.

9.7 Click I accept then type in the authentication text to finish registering your Gmail account.

10 Email

10.1 Select "Email", then input your email address and password.

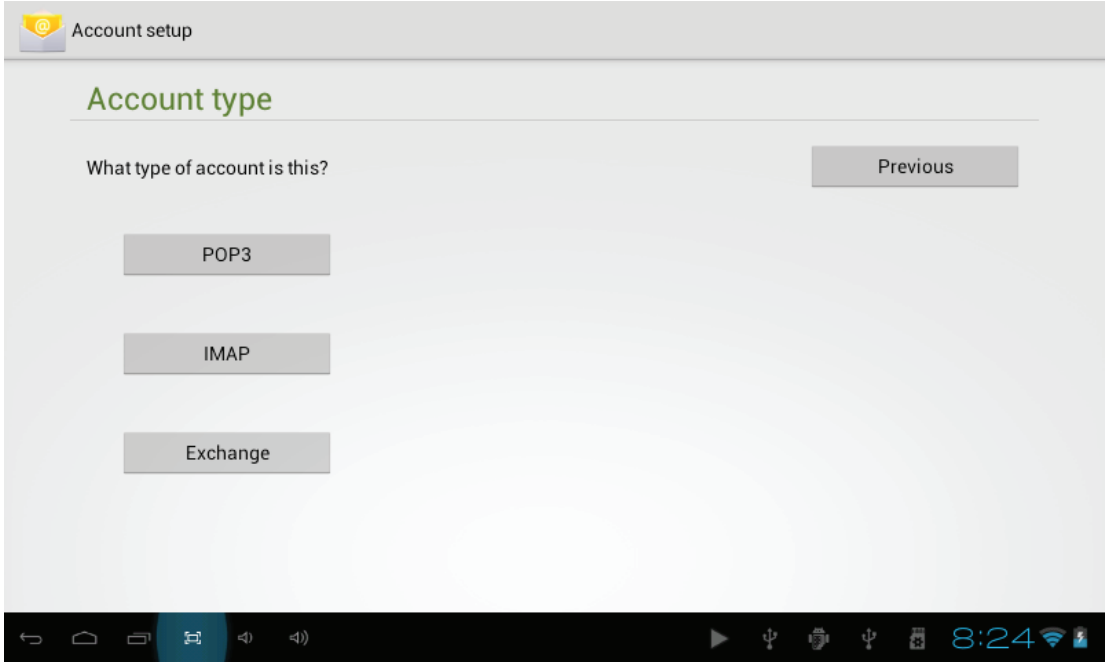
Account setup
Account type
What type of account is this?
Previous
POP3
IMAP
Exchange
8:24

10.1 Account setup

10.2 Set the Email server POP3 and IMAP. Network ports of different email servers will vary. The photos below are provided only for reference.

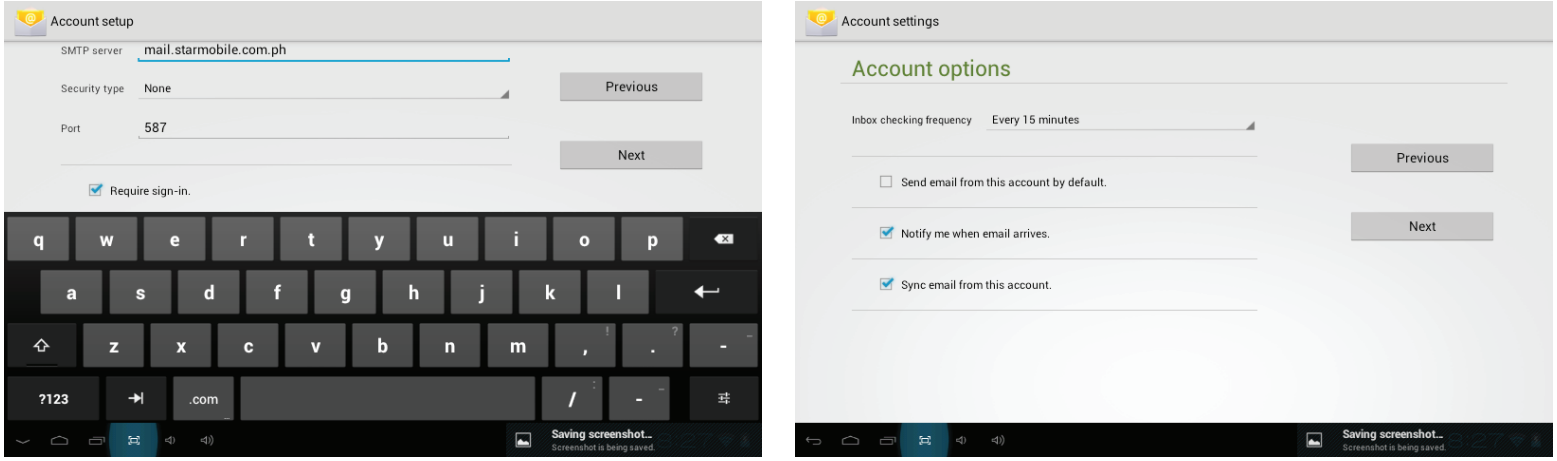

Account setup

SMTP server: mail.starmobile.com.ph

Security type: None

Port: 587

☑ Require sign-in.

Previous
Next
Saving screenshot...
Screenshot is being saved.

Account settings

Account options

Inbox checking frequency: Every 15 minutes

☐ Send email from this account by default.

☑ Notify me when email arrives.

☑ Sync email from this account.

Previous
Next
Saving screenshot...
Screenshot is being saved.

10.2 Configuring email servers

11 Play Store

11.1 Enter Play Store and select the apps you want to download. You may also search for apps by category or by keying in its name on the search box.

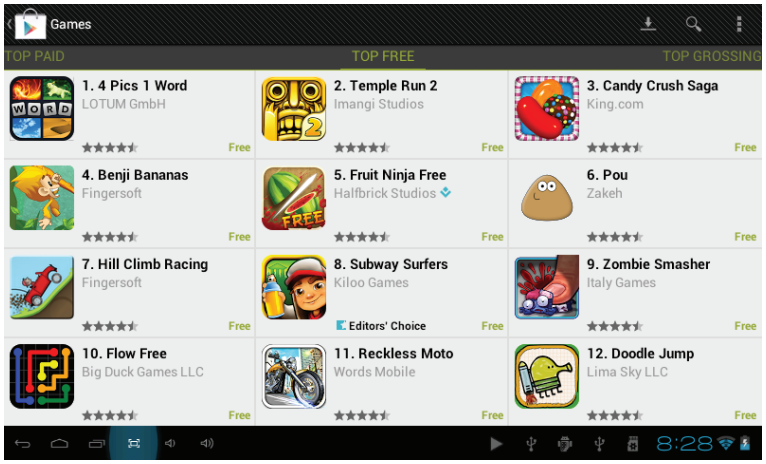

Games
TOP PAID
TOP FREE
TOP GROSSING

1. 4 Pics 1 Word LOTUM GmbH Free	2. Temple Run 2 Imangi Studios Free	3. Candy Crush Saga King.com Free
4. Benji Bananas Fingersoft Free	5. Fruit Ninja Free Halfbrick Studios Free	6. Pou Zakeh Free
7. Hill Climb Racing Fingersoft Free	8. Subway Surfers Kiloo Games Editors' Choice Free	9. Zombie Smasher Italy Games Free
10. Flow Free Big Duck Games LLC Free	11. Reckless Moto Words Mobile Free	12. Doodle Jump Lima Sky LLC Free

8:28

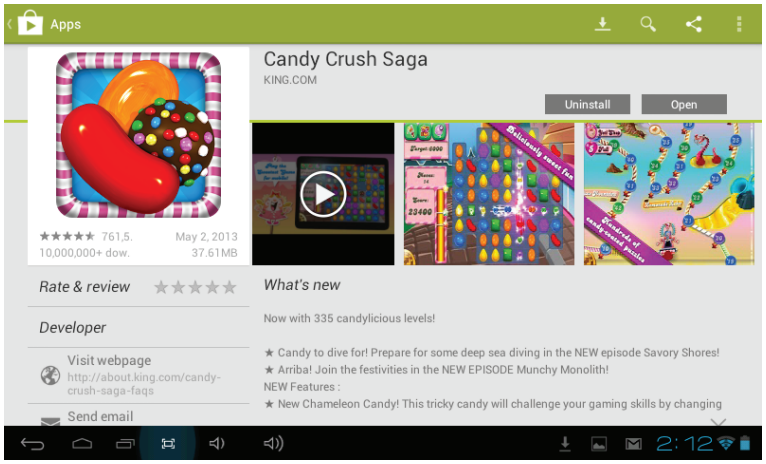

Apps

Candy Crush Saga

KING.COM

Uninstall
Open

★★★★★ 761,5.. May 2, 2013

10,000,000+ dow.. 37.61MB

Rate & review
Developer
Visit webpage
http://about.king.com/candy-crush-saga-faqs
Send email
2:12

What's new

Now with 335 candylicious levels!

★ Candy to dive for! Prepare for some deep sea diving in the NEW episode Savory Shores!
★ Arriba! Join the festivities in the NEW EPISODE Munchy Monolith!
NEW Features :
★ New Chameleon Candy! This tricky candy will challenge your gaming skills by changing

11.1 App gallery

11.2 App information

11.2 Navigate to an app you want to install and tap to select it – the details screen containing more information on the app and developer will appear.

Click “Download” then “Accept and Download” to confirm the permissions for the app. Your item will start downloading immediately.

11.3 You can also access the Play Store using a desktop computer via the same Google account used for your Engage 7. Search for the app you want to download. The app will be synced to your Engage 7 once it passes the compatibility test. Your Engage 7 must be connected to Wi-Fi for the downloaded app to sync and be installed.

12 Downloads

Downloaded files are stored in the Download directory that's visible when your device is connected to a computer. You can view and copy files from this directory.

- Open Downloads and manage downloaded files.
- Touch the Downloads icon from a Home or All Apps screen.
- Touch an item to open it.
- Touch headings for earlier downloads to view them.
- Check items you want to share. Then touch the Share icon ⋖ and choose a sharing method from the list.
- Check items you want to delete. Then touch the Trash icon 🗑.
- At the bottom of the screen, touch Sort by size or Sort by date to switch back and forth.

13 Maps

You must have Location Services turned on to view your location in Maps and to use your location to find local resources via 3G dongle or Wi-Fi.

1. To enable Location Services, go to your device’s Settings menu and select Location.

2. Select the location options that you want to use.
3. Enable Google Location Services.
4. Enable location and Google search.

14 System Update

You can download and install updates for your Starmobile Engage 7 with the firmware over-the-air (FOTA) service. To check for available firmware updates, go to Settings>Starmobile Engage 7>System updates>Check for updates.

Should an update be available, back up all your apps, photos, music, and videos as the upgrade will erase all content from your device (see next item).

Once you have backed up your data, follow the on-screen instructions.

Note: Your device may reboot several times during the update, which is a normal part of the update process. If your device freezes or does not respond for a prolonged period, press and hold the power on/off button until the device shuts down.

15 System Backup

You can back up settings and other data associated with one or more of your Google Accounts. If you need to replace or factory reset your device, you can restore your data for any accounts that were previously backed up.

To view these settings:

1. From a Home or All Apps screen, touch the Settings icon.
2. Under Personal, touch Backup & reset.

These options are available:

- Back up my data. If you check this option, a wide variety of your personal data is backed up automatically, including your Wi-Fi passwords, Browser bookmarks, a list of the apps you’ve installed on Google Play, the words you’ve added to the dictionary used by the onscreen keyboard, and most of your customized settings. Some third-party apps may also take advantage of this feature, so you can restore your data if you reinstall an app.
  If you uncheck this option, your data stops getting backed up, and any existing backups are deleted from Google servers.

- Backup account. Displays the Google Accounts whose information gets backed up. You must sign in with one or more of these accounts on a new or reset device to retrieve the associated information.
  To add a new account, touch Backup account > Add account.

- Automatic restore. Check this option to restore settings and other data when you reinstall an app. This feature requires that you are backing up your data with your Google Account and that the app is using the backup service.

- Factory data reset. Touch this option, then Reset phone to erase all your personal data from internal storage, including information about your Google Account, any other accounts, your system and app settings, any downloaded applications, and your music, photos, videos, and other files.

After resetting your phone, you'll need to re-enter the same information requested when you first set up your phone. If you have previously backed up your data on to a Google account, an option during the setup process allows you restore it.

Some third-party apps also make use of the backup service, so if you reinstall one, its settings and data are restored.

VII. Connecting to Networks and Devices

7.1. Portable Wi-Fi hotspot

The tethering & portable hotspot settings described below allow you to share your data connection. To view these settings:

- From a Home screen or All Apps screen, touch the Settings icon.
- Under Wireless & Networks, touch More > Tethering & portable hotspot.

VIII. Troubleshooting

To troubleshoot possible concerns when using your Starmobile Engage 7, please refer to the following table.

Possible Concerns	**How to Fix**
Long start-up	Starting Engage 7 for the first time usually takes some time. During system upgrades, it takes about 2-3 minutes to install preloaded application software. The unit will be faster on the next reboot.

Long start-up	Starting Engage 7 for the first time usually takes some time. During system upgrades, it takes about 2-3 minutes to install preloaded application software. The unit will be faster on the next reboot.
Unable to connect to Wi-Fi	• Check whether the wireless router is working. • Check whether your unit is near the wireless router, or if there are walls or barriers that hamper the signal from wireless router. • Check whether the user name and the password are correct.
The unit feels warm	Operating various programs at the same time or high brightness settings may cause te device to get warm. Rest your device after every three hours of heavy use to keep it running optimally.
System failure	Installing a 3rd party program may result in faulty operation. Press the RESET button to reboot the system.
Unable to login to your email account	• Check whether the device is connected to the Internet. • Check if email settings are correct.

Happy Man by Starmobile

@happymanPH

www.starmobile.com.ph